

STRUCTURE PREPARATION / AFTER THE RACE

Structure preparation using Trimaxx

i

For this application you need the following products:


Trimaxx – Alpine structure tool

Ref. No. 20642 p. 29

OvalBrush Steel MicroFinish

Ref. No. 24523 p. 30

1

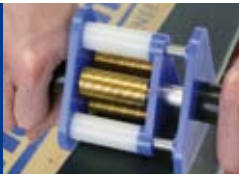

Mark the structure after waxing!

2



Mark the whole length of the structure along one side, applying even pressure. Turn the tool and repeat the process for the other side of the ski to ensure the whole width of the ski is marked.

Then slightly rework using the OvalBrush Steel MicroFinish.